




## Installation Guide

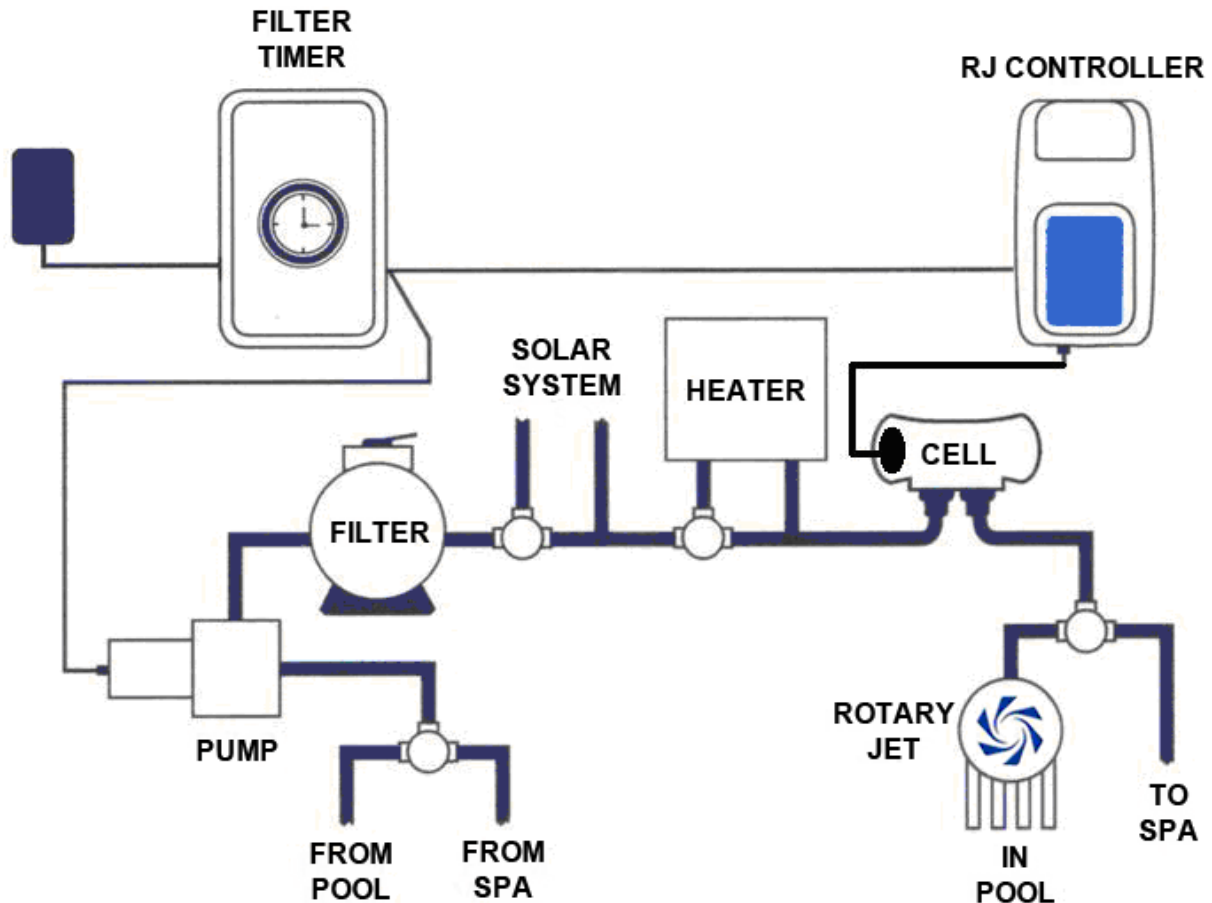

- Start with a clean pool with normal levels of chlorine.
- Turn off all power to pool equipment at breaker box.
- Locate timer for primary pool pump.
- Mount control box near timer (5 feet or less).
- Locate return PVC pipe (to pool).
- Cut return pipe (6 7/8") and install generating cell (with 2-90 degree elbows). **\*\* make certain cable from control box reaches cell location \*\***
- Have electrical connected from load side of the timer to control box by qualified person.
- Add salt to pool (30 pounds per 1000 gallons of water). Buy pool salt or plain water softener salt.
- To calculate gallons – length x width x average depth x 7.5
- Turn on power and run primary pump for three hours
- After pump has run for at least three hours, power on the salt unit using the front panel power button.
- Let system go through boot cycle (2 minutes)
- Set output to 70% using arrow keys
- Check chlorine levels in one week and adjust output percentage as needed (ideal cl level is 1.5 to 2.5 ppm)
- Rotary Jet – See separate installation instructions.
- You may download the complete users guide here: <http://www.circupool.com/installation.php>