


### Configuration for conversion from existing RJ Classic system

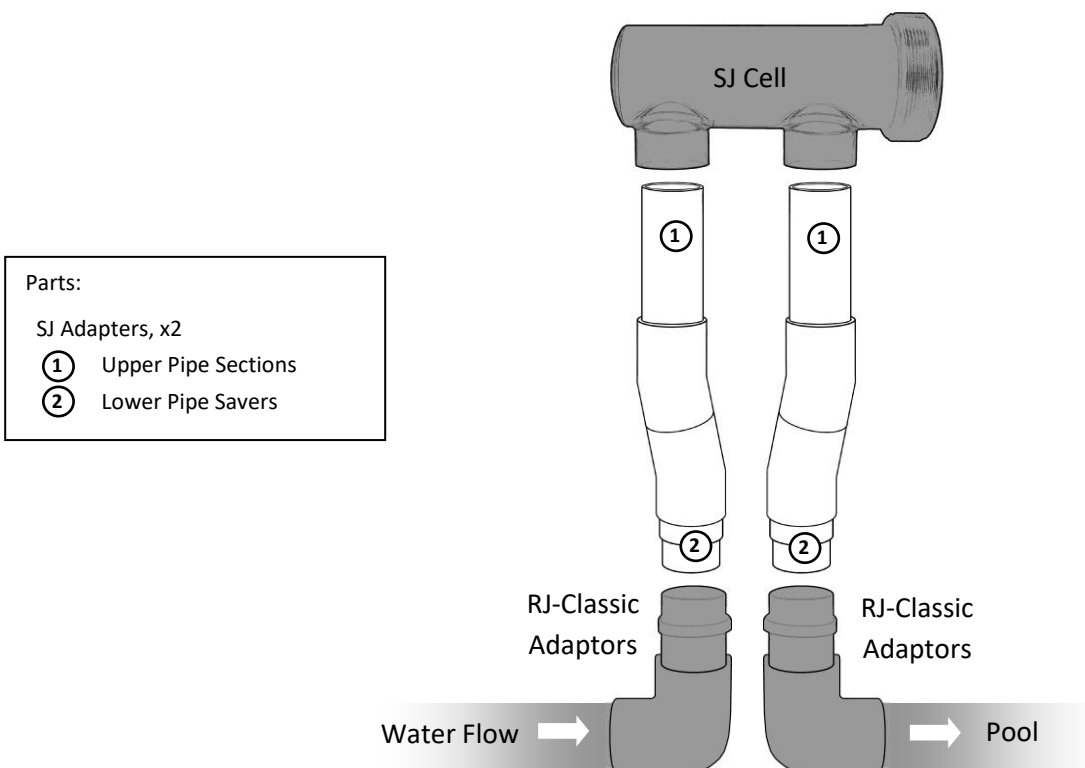

### Layout - Included parts are shown in white

This configuration allows the SJ Cell to be added on to existing cell unions from an older CircuPool RJ-Classic Series system. Refer to your manual for important installation instructions and warnings.

Tools Required: PVC primer and PVC cement

- Lay out and arrange equipment and fittings according to the illustration.
- Remove existing RJ-Classic clear cell housing (not pictured) so that only the black plastic barrel unions and threaded collars remain (RJ-Classic Adaptors).
- Dry-fit SJ Adapter upper pipe sections (part 1) into SJ Housing. Then, rotate them in place so that the lower pipe savers (part 2) are the correct distance apart to match the width of the RJ-Classic Adaptors.
- Using PVC primer and cement, glue the lower pipe savers (part 2) to the inside of the RJ-Classic Adaptors. (Note: the threaded collars from the RJ-Classic system will not be utilized and can hang loosely in place.)
- Finally, use primer and cement to glue the SJ Cell housing onto the remaining upper pipe sections (part 1).

If you have any questions during installation, please call (888)-206-9938 for additional service.